



High Bay Installation Instructions

Cautions

1. Make sure power is removed or turned off before installing product.
2. This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and hazards involved.
3. The product must be installed in accordance with the National Electrical Code and all applicable local codes. Proper grounding is required for safety.

Précautions

1. Veillez à ce que le pouvoir est supprimé ou désactivé avant d'installer le produit.
2. Ce produit doit être installé conformément au code d'installation en vigueur par une personne familière avec la construction et l'exploitation des produits et des risques impliqués.
3. Le produit doit être conforme au Code électrique National et tous les codes. Raccordée à la terre est nécessaire pour la sécurité.



Standard Unit HL17E
100W-720W Each




Mid Temperature Unit 60C17E
220W-660W



High Temperature Unit 65C17E
220W-660W

Mounting Options

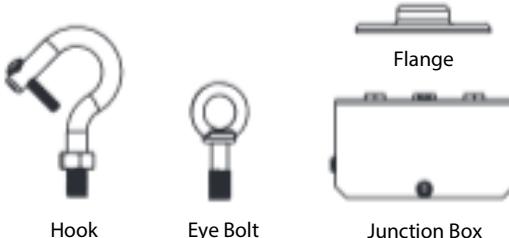

Mounting






Select desired fixture location. Using specified mounting option, secure fixture in place with appropriate hardware. Make sure mounting location is suitable for weight of fixture.



Reflector Options

Securing Reflector

- Use guidelines below for securing reflector types to high bay fixture. Necessary adapter plates are install on reflector.
- Each fixtures is provided with hardware needed to secure reflector in place. Mounting locations of screws and mounting tabs may vary slightly from pictures shown

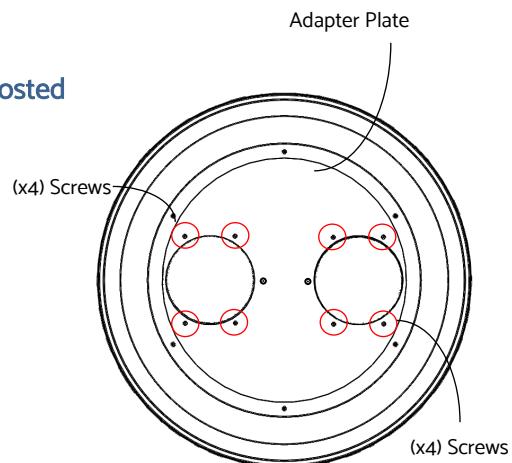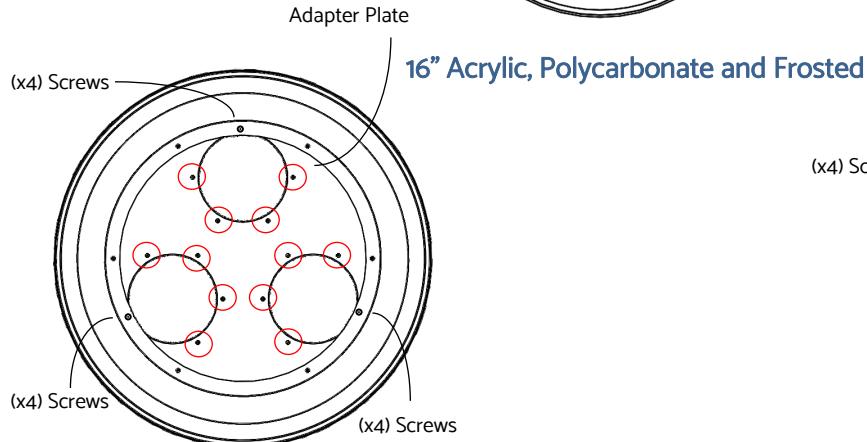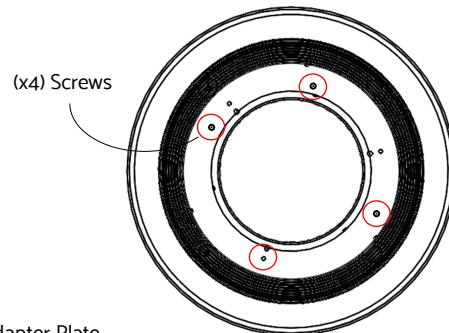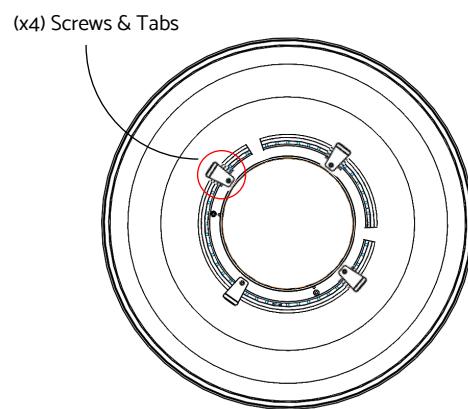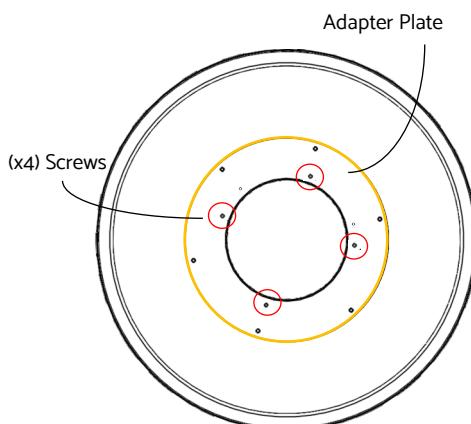



Wiring Diagrams

- Make sure power is off or removed before making any electrical connections.
- All connections must be completed within junction box located on top of fixture or within an appropriately rated junction box near fixture. All electrical connections must be in-line with standards set by the National Electrical Code and all applicable local codes.
- See Color guide below for 120-277V AC wiring and 0-10V dimmable wiring color combinations.
- For corded fixtures, all cords must be appropriately secured to corresponding receptacle.


AC 120-277V Power Wires

<u>Line</u>	<u>Neutral</u>	<u>Ground</u>
BLACK	WHITE	GREEN
BROWN	BLUE	GREEN/YELLOW


0-10v Dimming Wires

<u>Dimming (+)</u>	<u>Dimming (-)</u>
BLUE	WHITE
VIOLET	GRAY

Standard

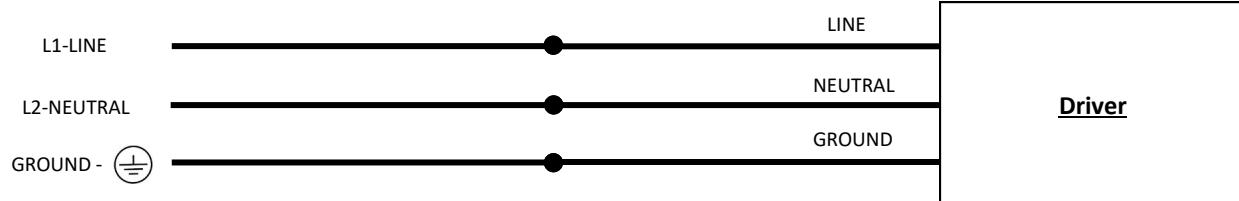120-277VAC / 200-480VAC

Dimmable

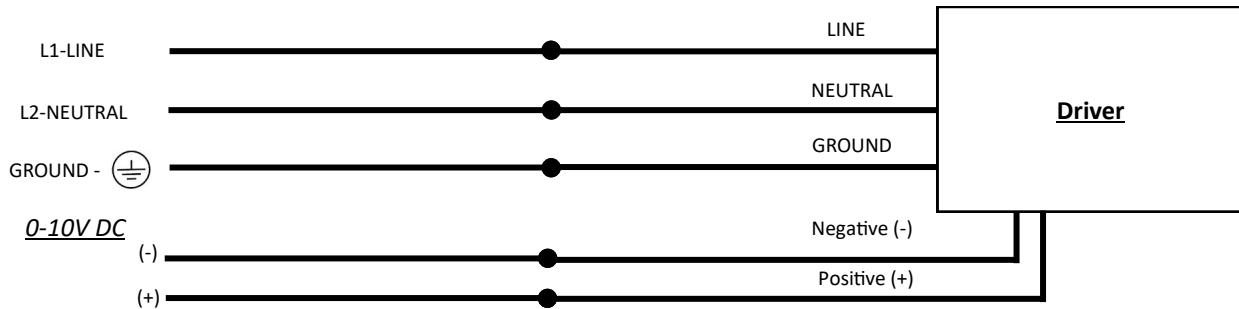120-277VAC / 200-480VAC



EVERLAST® LIGHTING

BASE PART #

PROJECT


On/Off

120-277V AC

L1-LINE

L2-NEUTRAL

GROUND - 

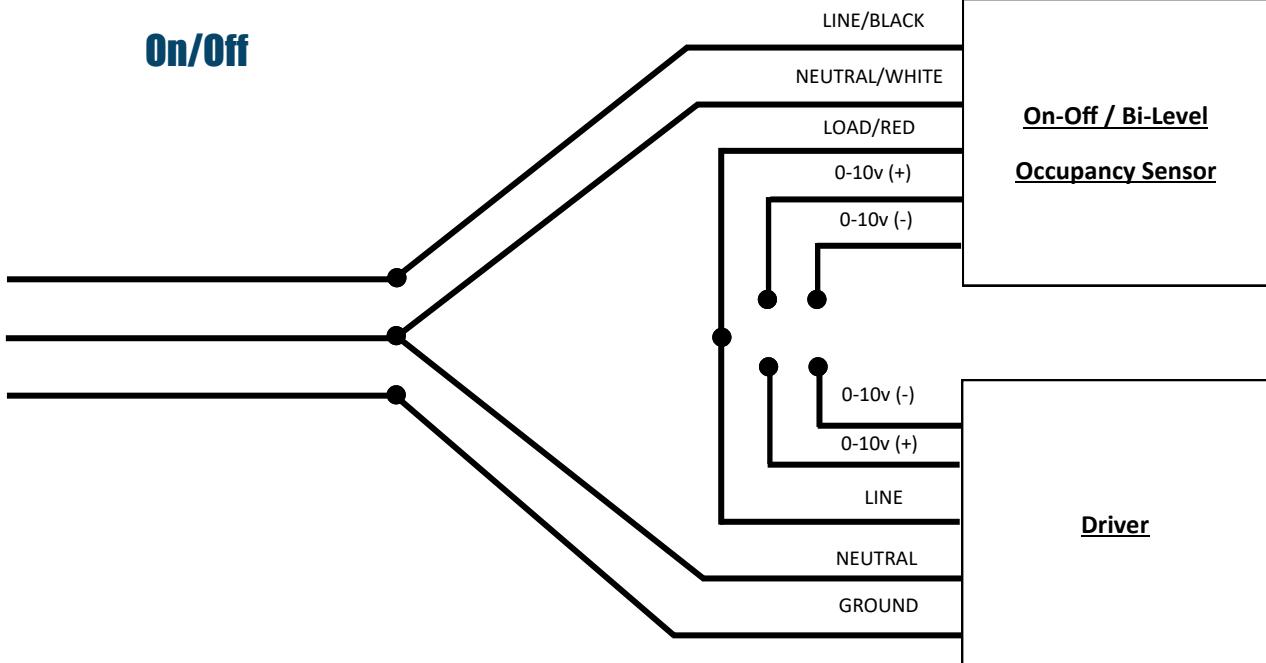


Bi-Level

120-277V AC

L1-LINE

L2-NEUTRAL

GROUND -

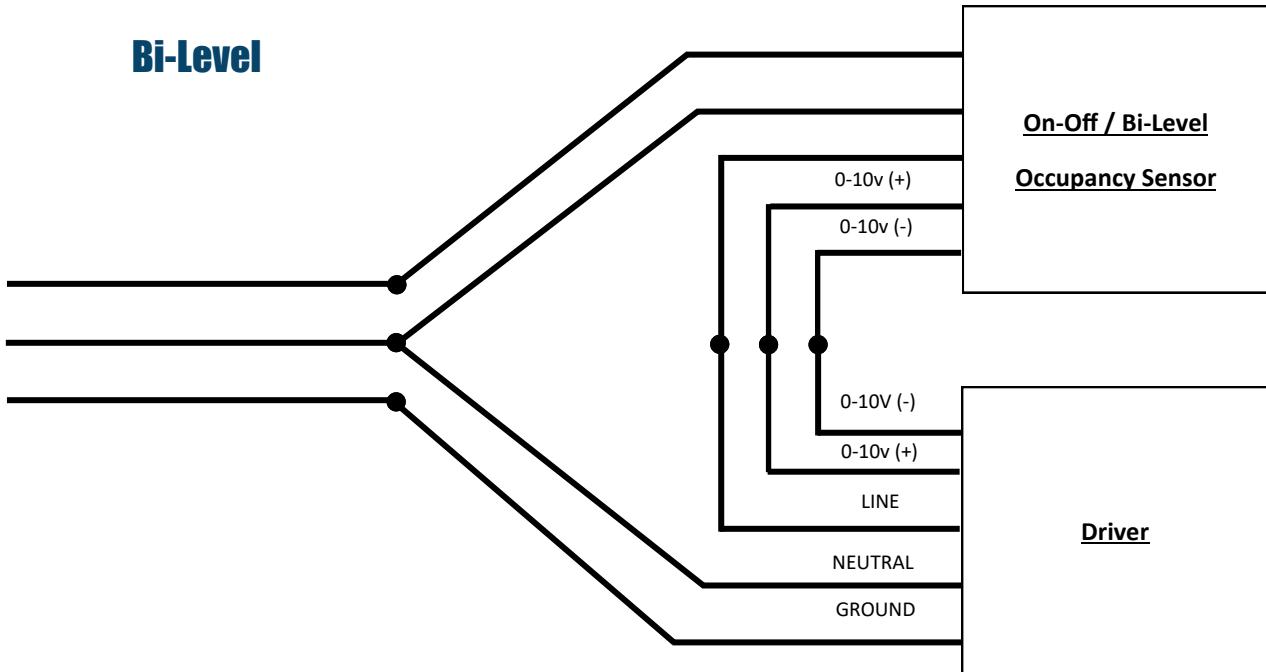

FAX 866-366-4029

WWW.EVERLASTLIGHT.COM

CALL 888-383-7578

© 2017 EVERLAST® LIGHTING, LLC. ALL RIGHTS RESERVED. PUBLISHED BY EVERLAST® LIGHTING, 2021 WELLWORTH AVENUE, JACKSON, MICHIGAN 49203. REPRODUCTION IN PART OR WHOLE OF THIS DOCUMENT IN ANY COMMERCIAL USE INCLUDING PUBLICATION, BROADCASTING, OR REDISTRIBUTION IN ANY MEDIUM WITHOUT THE PRIOR WRITTEN PERMISSION OF THE PUBLISHER IS PROHIBITED. 12-17

Maintenance

Review EverLast Lighting Inc. warranty for a list of components covered under warranty.

NOTE: For employee safety, all power connections shall be turned off or removed before performing any maintenance on lighting fixtures. Persons performing maintenance shall be familiar with construction and operation of product, plus the hazards involved.

Cleaning Schedule

To maintain proper efficiency of luminaire, a regular cleaning schedule needs to be established in regards to the placement, location and conditions of product installation. Frequency of cleaning shall be to the discretion of the end user, but should be no less than every 90 days. If conditions mandate, a more frequent cleaning schedule must be implemented. Improper cleaning may result in component malfunctions, product failure and voidance of warranty.

Fixture Cleaning

- If applicable – use air to blow dust and debris from lens, hood, heatsinks and drivers before wiping with a cleaning solution.
- Use only mild, nonabrasive cleaners. Spray cleaner onto **soft** cloth and wipe surface of lens before wiping down other surfaces of lighting fixture.
- If needed – use a very **soft** brush or duster to remove excess particles from between heatsinks, drivers or other difficult to reach areas.
- Note any damage (cracking, splitting, peeling, breaks). Contact local sales representative, distributor or EverLast Lighting Inc. if damage replacement is necessary.

Hardware

- Fixture hardware shall be inspected before each cleaning.
- Check to make sure all hardware connections are secure. Make sure to tighten any loose screws, bolts, nuts, liquid tight connectors, strain reliefs or electrical connections.
- Note any instances of damaged hardware. If any hardware is found to be consistently loose, damaged or questionable in any manner, contact local sales representative, distributor or EverLast Lighting Inc.

Electrical Connections

- Check electrical connections each time maintenance is performed.
- Check to make sure all components (drivers, sensors, transformers, etc.) are properly connected and secured.
- Proper wiring connections and ground are imperative for fixture performance and customer safety.

Safety Cables (if applicable)

- Safety cables shall be regularly inspected during cleaning cycles.
- Check to make sure cables and connectors show no signs of damage. If damage is found contact local sales representative, distributor or EverLast Lighting Inc. for replacements cables right away.